

4'R

乙

4'R

## 4' X 28' RECTANGLE 4' RADIUS 6' SWIMOUT (optional) +1 6' SWIMOUT -1 6' PANEL 28 6' SWIMOUT **4'R COZY CORNER** 4'R COZY (optional) -2 4'R PANELS -1 BRACE +1 4'R COZY STEP **G** Þ W BILL OF MATERIALS 3'4" 28 28 4 ගු ഗ 3 U Z 겅 ∞\_ 4-PERIMETER -G---I--OVERDIG DETAIL 77'2" -J--K--SQ. FOOTAGE GALLONS 10673 392

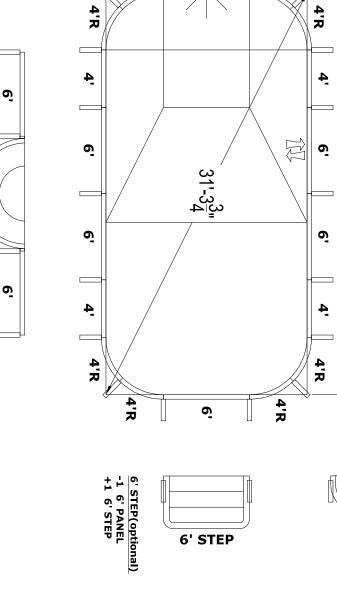

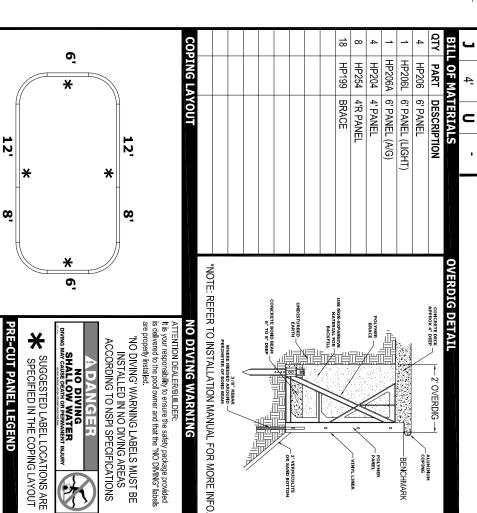

## Document ID: HF5100, Hydra Standard Panel Layout Drawing Rev Date: 12/6/2005 Rev Level<sup>1</sup> A

3. The ideal water level should be to the middle of the skimmer opening(s).

2. Soil to have minimum bearing capacity of 2000 P.S.F.
3. Locate top of pool at least 6" above surrounding land elevation.
4. See 'Over Dig Detail' for excavation around pool.
5. Fill words under base of panels and tamp well.
6. Backfill with non-expansive material.

**EXCAVATION NOTES** 

Rough excavation should be 2" deeper in each instance.

The dealer or contractor who sells or installs your pool is an independant contractor and is not an

THIS DOCUMENT IS FOR ILLUSTRATIVE PURPOSES ONLY.

ADDITIONAL NOTES

agent of the Manufacturer. The construction methods illustrated here are suggestions and apply only to normal ground conditions. There may be additional precautions and/or methods of construction. Proper installation is the responsibility of the dealer/builder/contractor.

JAN 2012 CORNERSTONE

14' X 28' RECTANGLE 4' RADIUS

Copyright © 2012 by Hydra Pools

20114-PWH

HSH

AQUAGENIE

COZY COVE

8' COZYCOVE (optional)
-2 4' PANELS

+1 8' COZY COVE

-1 BRACE

Dimensions are from inside pool panels.

ese are finished dimensions ready for the liner.

GENERAL NOTES