uvument ID: HF5100, Hydra Standard Panel Layout Drawing Rev Date: 1216/2005 Rev Level⁻ A

The ideal water level should be to the middle of the skimmer opening(s).

2. Soit to have minimum bearing capacity of 2000 P.S.F.
3. Locate top of pool at least 6" above surrounding land elevation.
4. See 'Overdig Detail' for excavation around pool.
5. Fill yords under base of panels and tamp well.
6. Backfill with non-expansive material.

EXCAVATION NOTES

Rough excavation should be 2" deeper in each instance.

The dealer or contractor who sells or installs your pool is an independant contractor and is not an

THIS DOCUMENT IS FOR ILLUSTRATIVE PURPOSES ONLY.

ADDITIONAL NOTES

construction. Proper installation is the responsibility of the dealer/builder/contractor. only to normal ground conditions. There may be additional precautions and/or methods of agent of the Manufacturer. The construction methods Illustrated here are suggestions and apply

JAN 2012 | CORNERSTONE

18' X 40'2" LAZY-ELL RIGHT 6"RADIUS

Dimensions are from inside pool panels.

ese are finished dimensions ready for the liner.

GENERAL NOTES

Copyright © 2012 by Hydra Pools

20421-PWH