

uvurment ID: HF5100, Hydra Standard Panel Layout Drawing Rev Date: 1216/2005 Rev Level⁻ A

The ideal water level should be to the middle of the skimmer opening(s).

2. Soil to have minimum bearing capacity of 2000 P.S.F.
3. Locate top of pool at least 6" above surrounding land elevation.
4. See "Overdig Detail" for excavation around pool.
5. Fill woils under base of panets and tamp well.
6. Depositing with a common panets and tamp well.

The dealer or contractor who sells or installs your pool is an independant contractor and is not an

construction. Proper installation is the responsibility of the dealer/builder/contractor. only to normal ground conditions. There may be additional precautions and/or methods of agent of the Manufacturer. The construction methods illustrated here are suggestions and apply

Dimensions are from inside pool panels.

Copyright © 2012 by Hydra Pools

20935-PWH