

INSTALLATION, USE & CARE INSTRUCTIONS

The model number of your item is printed on the side of your carton.
Always use this number to identify your item.

WARNING: Choking hazard – This product may contain small parts. Not for use with children. This is not a toy. Do not leave children unattended with the inflatable.

WARNING: Changes to or modifications of this product can cause serious injury or property damage and will void the warranty.

WARNING: Risk of Electric Shock. When used outdoors, connect only to a covered, Class A GFCI-protected receptacle that is closed and weatherproof when the product plug is connected to the receptacle. If one is not available, you must contact a qualified electrician for proper installation of a Class A GFCI-protected receptacle. Do not use this product without the proper receptacle.

USE AND CARE INSTRUCTIONS

Please read and follow all instructions that are on the product or provided with the product.
Please read the product setup instructions carefully.

- Do not use this product for other than its intended purpose.
- Before each use, inspect the product carefully, including any electrical components. Do not use any products that have frayed, damaged, loose, cracked or cut wires, lamps or enclosures, or exposed copper wire.
- Do not place your inflatable near bushes, trees or building structures as they can puncture the inflatable. Do not install or use within 30 feet of a pool or building structure.
- Do not place your inflatable near utility poles or wires. Reference the National Electrical Code (ANSI/N FPA 70) specifically for the installation of wiring and clearances from power and lighting conductors.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- To reduce the risk of electrical shock, protect the electric fan, power cord and other electrical components from direct exposure to water.
- Turn off or adjust the schedule of your sprinklers while you have your inflatable set up.
- Note that the fan may stop operating at temperatures below 14° F (-10° C).
- Do not secure the product cord with staples or nails or place on sharp hooks or nails.
- Unplug the product when not in use.
- Do not hang ornaments or other objects from cord, wire, light string or any part of the product.
- Do not close doors or windows on or otherwise pinch or compress the product cord as this may damage the wire insulation.
- Do not inflate your inflatable during unusually strong winds. If it becomes too windy for safe operation, simply unplug your inflatable and allow it to deflate. Wait for better conditions before re-inflating.
- Always store product in a cool, dry location protected from sunlight. Avoid storing near any sharp edges to avoid catching or tearing the material or fabric.
- Whenever handling the product (during storage, retrieval or setup), use caution to avoid any undue strain or stress on any of the product components, including blowers, plugs, connections and wires.
- Keep the area around the inflatable clear of leaves, dirt and debris. If the inflatable is dirty or wet, be sure to clean the inflatable and let dry completely before storing.

 
INSTALLATION AND SETUP

Please read the product setup instructions carefully. Do not operate this product in windy conditions.

- ① Find a flat area of either grass or gravel for your product. Do not set up your inflatable on a slope. Doing so may prevent the inflatable from inflating properly or standing correctly. It may also present a safety hazard. Be sure that the area is clear of leaves, loose dirt and/or standing water as any of these can stain the product or damage the fan.
-

- ② Carefully remove the inflatable and included items from the box. Set the stakes, ropes and clips aside. You will need those after fully inflating your inflatable for the first time.
-


③

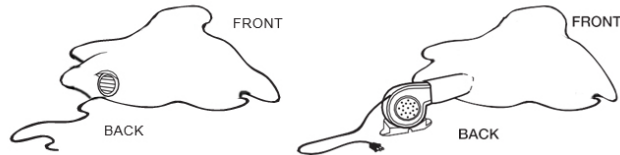

Lay your inflatable out on the ground. The fan will be on the back side of the inflatable. Ensure that the deflation zipper on the back of the inflatable is closed. Plug the fan into a Class A GFCI-protected receptacle to start inflating your inflatable.

For your first inflation, you will need to help your inflatable inflate properly. Ensure that all of the extremities are positioned correctly, untwisting anything that may have become tangled during unpacking and setup. For taller inflatables, you will want to connect the tie downs to the upper fabric (or metal) loops before you fully inflate. Otherwise, the loops may be too high to reach.

 
④

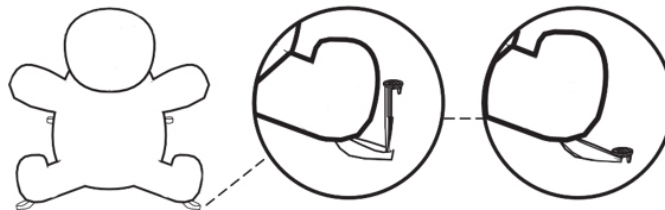

When fully inflated, locate all of the tie-down points around the base. Place a stake through the loop and press the stake about 2/3 of the way into the ground (you will insert these fully later). These stakes help hold the inflatable upright and prevent the wind from moving your inflatable.

Note: If your inflatable is taller than 10 feet, you will need assistance to safely position and secure your inflatable.

 
5

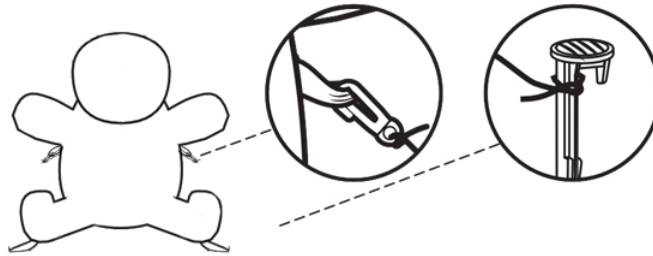

For inflatables under 9-feet tall, install at least three upper tie downs. For inflatables over 10-feet tall, you will need to install four or more upper tie downs, depending on the inflatable.

Attach each rope to a clip and attach the clip onto the upper fabric or metal loops. (If clips are not included, tie each rope to directly to the loop.) Tie the ropes to the additional ground stakes and secure the stakes about $\frac{2}{3}$ of the way into the ground (you will insert these fully later).

 
6

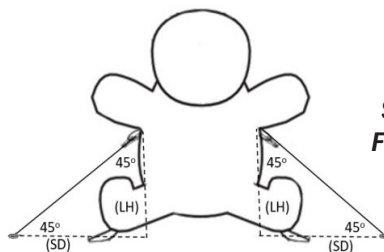

*To achieve a proper 45° Angle,
Stake Distance (SD) = Loop Height (LH)
For example, if the Loop Height (LH) is 6',
the stake should be placed
6' away from the inflatable*

The angle of the rope to the ground should be 45 degrees (see diagram above). To achieve a 45-degree angle, the stake distance (SD) from the inflatable should be roughly equal to the loop height (LH) on the inflatable.

 7

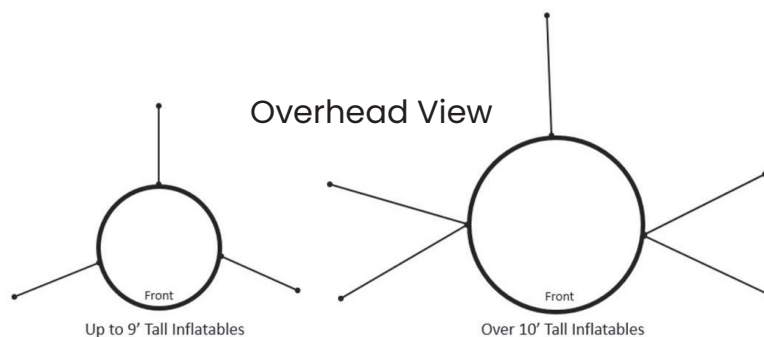

To properly secure your inflatable, install the upper tie downs according to the above graphic. Note that two of the side tie downs must angle forward by at least 30 degrees. Adjust stakes as needed to assure that the inflatable is fully upright and positioned correctly. When the inflatable is correctly positioned and all stakes have been placed, push all of the stakes fully into the ground.