



www.AmishGazebos.com
1-800-700-1777

Wood Gazebo-in-a-Box Assembly Instructions

©2017

Amish Country Gazebos

340 Hostetter Rd
Manheim, PA 17545

Customer Service Department Hours:

Monday – Friday 8:00 am – 4:00 pm and
some Saturdays 10:00 am – 3:00 pm
(Eastern Standard Time)

1-800-700-1777 Ext. 4

www.AmishGazebos.com

Amish Crafted Gazebos

WOOD Gazebo Assembly Manual

Please make sure the area where your gazebo is being installed is flat and level. If it is not level, the roof rafters and the fascia boards may not fit as nicely as they will when your site is level.

This manual, detailing 16 straightforward steps for installing your gazebo, should be kept by your side during the assembly process of your gazebo kit.

Most homeowners stain or paint their Amish Crafted Gazebo. **Due to the precise fit of many components we suggest that you stain or paint your gazebo after it is assembled.**

This manual is designed to give you the necessary guidance throughout each step of your gazebo assembly.

If you have questions regarding the content of your kit or installation of your gazebo, please contact our Customer Service Department at 1-800-700-1777 Ext 4.

Hours of operation are Monday - Friday 8:30 am - 5:00 pm and some Saturdays 10:00 am - 3:00 pm (Eastern Standard Time)

Step 1.	Gather your tools	(Page 1)
Step 2.	Floor dimensions table and site preparation information	(Page 2)
Step 3.	Sort your gazebo parts.....	(Page 3)
Step 4.	Install your deck (optional)	(Page 4-5)
Step 5.	Assemble the 7 individual wall panels and 1 door panel	(Page 6)
Step 6.	Attach the 7 wall panels and 1 door panel to each other	(Page 7)
Step 7.	Install the 8 roof rafters.....	(Page 8)
Step 8.	Install the 8 fascia boards	(Page 9)
Step 9.	Install the plywood roof panels	(Page 10)
Step 10.	"Square" the gazebo and "toe-nail" the posts to your deck	(Page 11)
Step 11.	Installing the optional electrical package.....	(Page 12-13)
Step 12.	Apply the shingles to your gazebo roof.....	(Page 14-15)
Step 13.	Apply the ridge cap shingles.....	(Page 16-17)
Step 14.	Shingle and install the cupola.....	(Page 18-19)
Step 15.	Installing the screen package (optional).....	(Page 20)
Step 16.	Install the benches (optional)	(Page 21)

STEP 1. Gather the following tools to use for assembly of your gazebo:

Rubber Mallet



Hammer



Drill



Measuring Tape



Utility Knife



8' Ladder



Clamps




2

Step 2. Site Preparation

It is most important to have a solid, flat and level foundation for your gazebo.

Indicate the location of your gazebo foundation by doing the following:

1. Cut 8 boards at a 22.5° angle. Each should be the length of dimension 'C' at their longest point.
2. Place the boards around the perimeter of the site to be prepared for your gazebo. Verify that the boards are positioned in an octagonal shape by using dimensions 'A' and 'B'.
3. Spray paint along the outside of the boards to indicate the precise perimeter of your gazebo floor and then remove the boards.

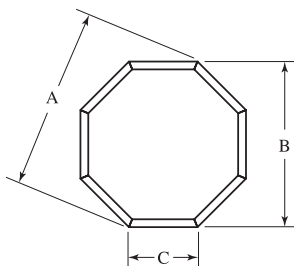

***Note:** If you choose the concrete pad option, refer to the instructions in the bottom right corner of this page.

FLOOR DIMENSIONS TABLE

These dimensions are ideal to use for your foundation, whether you have a gazebo floor or not.

Size	A	B	*C
8 ft.	97 ³ / ₁₆ "	89 ¹³ / ₁₆ "	37 ³ / ₁₆ "
10 ft.	125 ¹⁵ / ₁₆ "	116 ⁵ / ₁₆ "	48 ³ / ₁₆ "
12 ft.	144 ¹ / ₈ "	133 ¹ / ₄ "	55 ³ / ₁₆ "



Carefully consider the recommendations listed below prior to choosing the ideal foundation for your gazebo.

Our kits with floors are designed to have all the floor joists in contact with crushed stone or concrete.

If you are installing on a deck or elevated surface please contact your designer, as each situation is site specific.



CRUSHED STONE (to be used with a floor)

1. Dig out 3"–6" of ground.
2. Plant concrete blocks at each octagonal point and in the center (9 blocks total).
3. The top of the blocks will be the highest point of your foundation. All blocks must be level with each other.
4. Place 3"–4" of crushed stone around the blocks and throughout the foundation. Make sure none of the crushed stone are higher than the blocks.

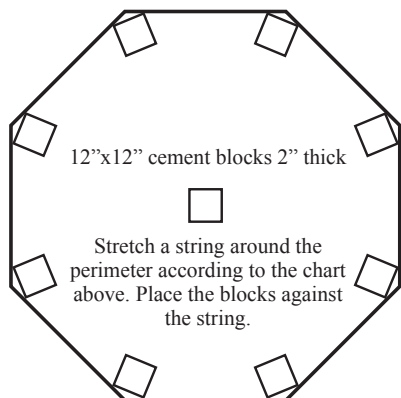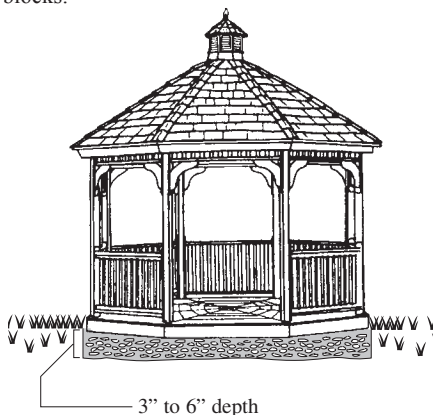

CONCRETE PAD (to be used with or without a floor)

1. Dig out 4"–5" of ground so it is level all through out its lowest point.
2. Temporarily plant wood forms around the perimeter of your gazebo foundation area.
3. Dig a 12"x12" continuous footing around the perimeter of the pad.
4. Use rebar as needed.
5. Pour concrete throughout the base, making sure all points of the top are level.

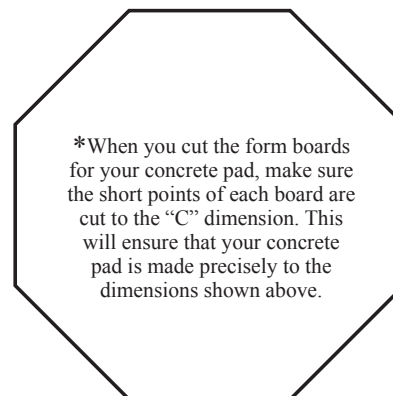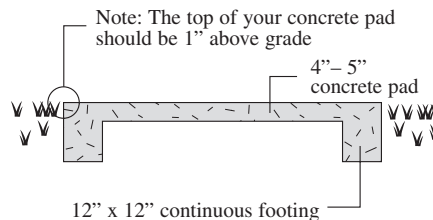


3


STEP 3. Sort all of your gazebo parts as listed below:

(Match the quantity of parts to the corresponding size of your gazebo)

	8' Gazebo Kit	10' Gazebo Kit	12' Gazebo Kit
<input type="checkbox"/> 2" screws	1 bag	1 bag	1 bag
<input type="checkbox"/> 2½" screws	1 bag	1 bag	1 bag
<input type="checkbox"/> ¾" roofing nails	1 bag	1 bag	1 bag
<input type="checkbox"/> right wall panel posts	7 pieces	7 pieces	7 pieces
<input type="checkbox"/> left wall panel posts	7 pieces	7 pieces	7 pieces
<input type="checkbox"/> right door panel post	1 piece	1 piece	1 piece
<input type="checkbox"/> left door panel post	1 piece	1 piece	1 piece
<input type="checkbox"/> ceiling center block	1 piece	1 piece	1 piece
<input type="checkbox"/> 2x4 roof rafters	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> fascia boards	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> upper rail header boards	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> left hand braces	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> right hand braces	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> 2x3 handrail plates	14 pieces	14 pieces	14 pieces
<input type="checkbox"/> 1x3 balusters	35 pieces	49 pieces	56 pieces
<input type="checkbox"/> large plywood roof panels	0 pieces	8 pieces	8 pieces
<input type="checkbox"/> medium plywood roof panels	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> small plywood roof panels	8 pieces	8 pieces	8 pieces
<input type="checkbox"/> shingles	4 packs	6 packs	7 packs
<input type="checkbox"/> cupola	1 each	1 each	1 each




7 left wall panel posts



7 right wall panel posts




1 left door panel posts




1 right door panel posts




ceiling center block (rafter joiner)



8 roof rafters



8 fascia boards



8 upper rail header boards




8 left braces


8 right braces




2x3 handrail plates (7 top, 7 bottom)

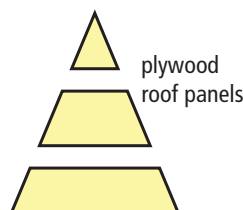

plywood roof panels



balusters

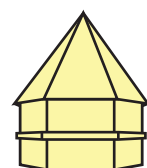


cupola
(we send cupola already together)

4

Step 4. Install your deck (optional)

If you ordered a floor with your gazebo, you will have received 8 triangular shaped floor panels.

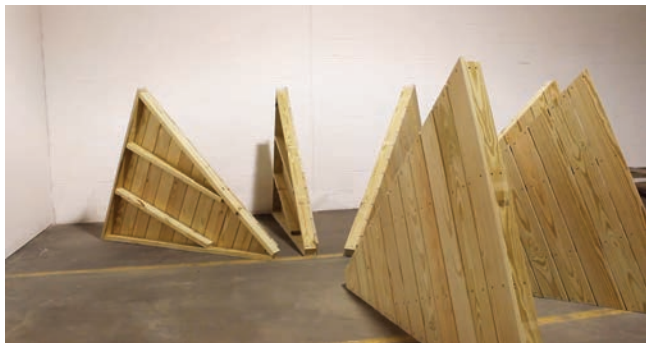


1. Place each of the eight triangular shaped floor panels, next to each other, on your foundation.

Note: Each floor panel has two boards that are temporarily fastened with small nails.



2. Place each floor panel on its side and tap the underside of these floorboards to remove them from the floor panel.

3. Then remove and discard the small nails from each floor board.

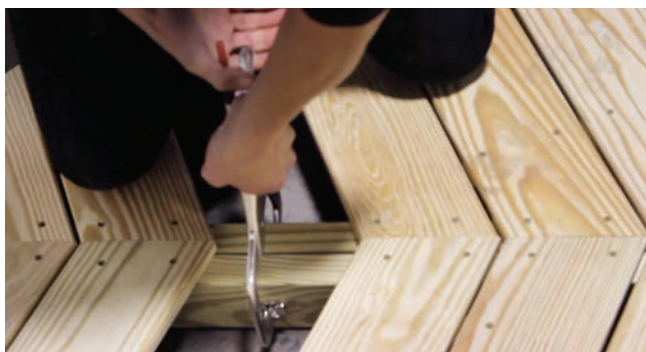

4. After aligning your floor panels, use clamps to tightly secure them together.



5. Now fasten the floor panels together using 2½" screws. Place one screw on each side of the floor joist at each opening.

6. Repeat step five until all floor panels are complete.



7. After the entire floor is fastened together, put down the sixteen floorboards that were removed earlier and the octagonal shaped floor center piece then fasten them in place using 2½" screws.



5

Step 5. Assemble the 7 individual wall panels and 1 door panel

Use 2½" screws to assemble each individual wall panel.
Begin by inserting each of the handrail balusters into the handrail top and bottom plates.



1. Each baluster should be inserted sideways into the appropriate cutout and tapped horizontally into place with your rubber mallet. Tap the top of each baluster to securely seat it down into the cutout in the handrail plate.



2. Insert each of the balusters into one handrail plate.




3. Follow the same procedure to attach the other handrail plate and balusters together.

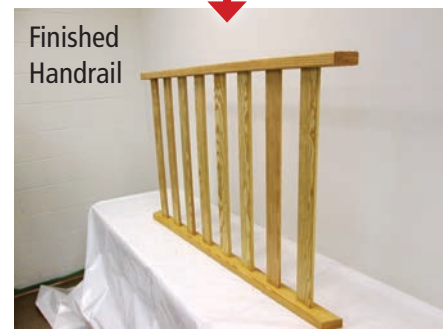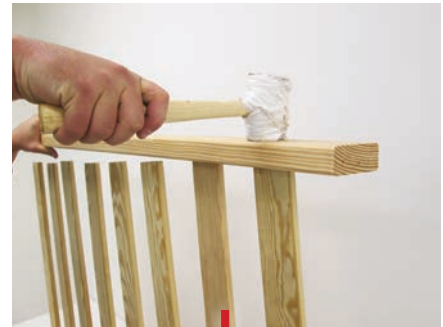

4. Next, arrange the handrail section, posts, braces and upper rail as shown below.

Note: The long point of each post must face toward the inside of your gazebo so the roof rafters fit properly.

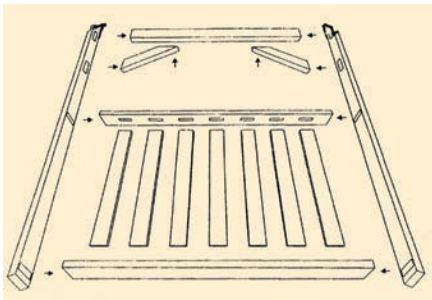

5. Use two 2½" screws at each connecting point except for the high end of the diagonal brace which requires only one 2½" screw in the pre-drilled hole.



Hint:
If you have the optional screen package, DO NOT install the angled braces in the door section.



6. Assemble all seven individual wall panels.



7. In each of the 7 wall panels, connect the top and bottom handrail plates to the center baluster(s) by driving 2" screws into the pre-drilled holes. Keep 29 ¼" spacing between the plates.



Note: For 12' gazebos there will be 2 screws used. With an 8' or 10' gazebo there will only be 1 screw used.

6 Step 6. Attach the 7 wall panels and 1 door panel to each other

1. Begin by clamping two wall panels together, also be sure to evenly line up the posts at the top and bottom.



2. Secure the posts using 2½" screws in pre-drilled holes.



3. Follow the same procedure to assemble the remaining wall panels, including the doorway panel.



Note: To avoid having screws visible in the doorway, attach the doorway panel by driving screws through the pre-drilled holes in the handrail section and into the doorway post.

7

Step 7. Install the 8 roof rafters

Gather the ceiling center block and 1 rafter.



1. Flush the top of the rafter with the top of the ceiling center block and attach the two together by driving one 2½" screw through the rafter.



2. Repeat this process with a second rafter that is placed directly across from the first rafter.



3. Now lift these 2 rafters and ceiling block into place.

Secure the position of the rafters by placing the notched portion of the rafter over the post top.




4. Install the third and fourth rafters at a 90° angle from the first two rafters.



5. Now install the remaining four rafters.



6. Using step ladder, reach to the roof peak and drive a 2½" screw through pre-drilled holes on each rafter top and into the ceiling center block.

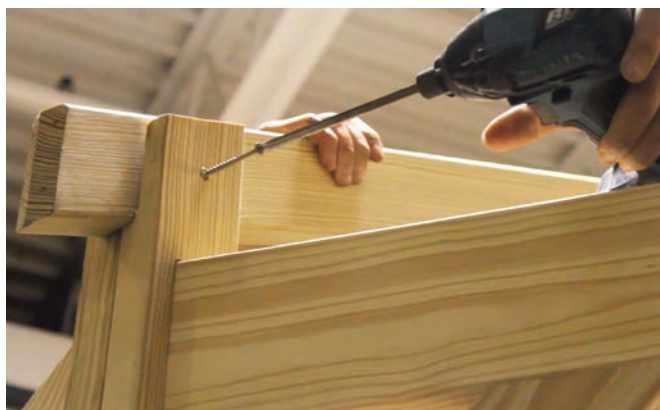


7. Lastly, drive one 2½" screw through one side of the post top and into the lower portion of each rafter.

8 Step 8. Install the 8 fascia boards

Gather the 8 fascia boards.

Each board has two pre-drilled holes on both ends and a tapered cut along the top edge.

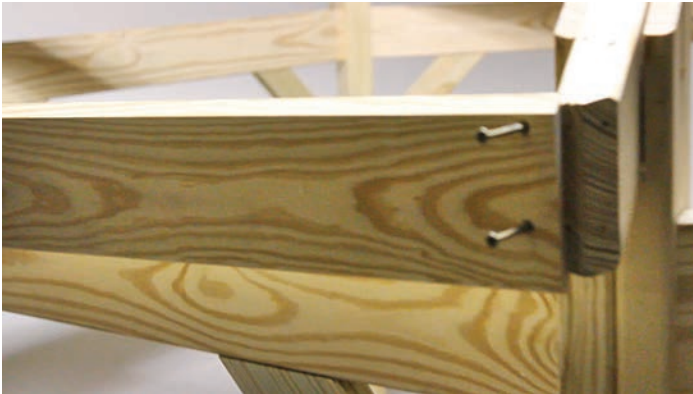


1. Manually place two 2" screws in each of the four pre-drilled holes of one fascia board.



2. Then position the highest point of the tapered cut evenly with the highest point of two rafters.



3. Next, center the fascia board on the two rafters then drive the screws into the rafters.

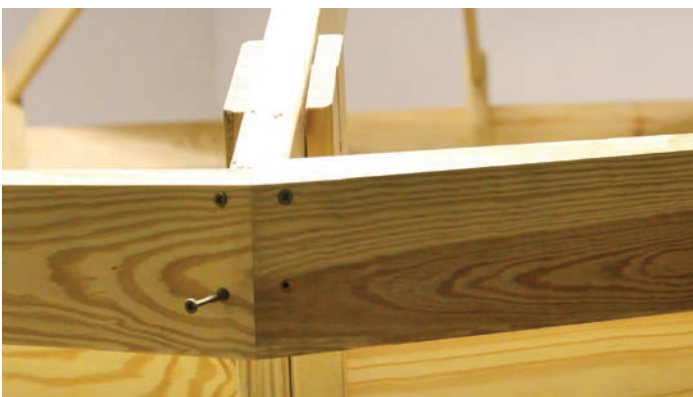

4. Neatly align the vertical joints of each fascia board and repeat this assembly process for all eight boards.

Note: You may need to back out the screws a little bit before you attach the next board. You can then retighten them all when all the boards are on.

9

Step 9. Install the plywood roof panels

Now your plywood roof panels can be attached to the roof rafters using the 2" screws. Be sure to place the best side of the plywood down since this will be the ceiling of your gazebo.



1. Begin with the largest plywood panel first.



2. Attach each bottom corner of the plywood to a rafter with 2" screws (1 screw into the left rafter and 1 screw into the right rafter).

Hint: Start a 2" screw in each corner along the bottom and 3" from bottom edge and 1/2" from side.

Note: Align the bottom edge of the plywood with the outside edge of your fascia board.



3. Next, go to the center of the plywood panel where it meets the fascia board. Pull the fascia board out slightly to properly align it, then drive one 2" screw through the plywood and into the fascia board.

Note: Only one screw is required per section to connect the plywood to the fascia board.



4. Continue by installing each of the eight large plywood panels around the lower roof perimeter.



5. Fasten each of these large plywood panels to the rafters with 2" screws spaced at 12"-16" on center.



6. Then climb up onto the roof and fasten the remaining plywood panels into place.

Step 10. "Square" the gazebo and "toe-nail" the posts to your deck

You need to make certain that your gazebo is 'square' or truly octagonal in shape.




1. To confirm this, measure diagonally from inside of one post to the inside of the opposite post.

This needs to be done at four points to include all eight posts. Make sure the distance between each post is the same to within $\frac{1}{4}$ ".



2. The vertical seams in the middle of each post should be positioned directly over the floorboard seam.

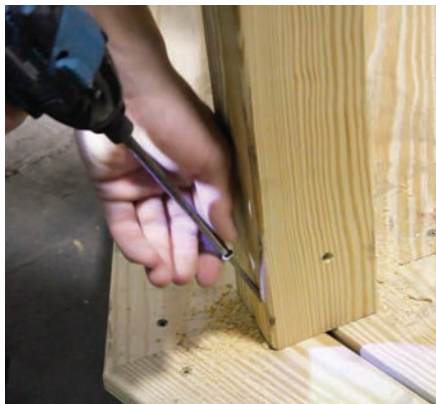

3. Now you are ready to secure each post into place with two fasteners.

Begin by pre-drilling two holes, at an angle, near the bottom of each post (one pre-drilled hole on the inside right and one pre-drilled hole on the outside right).

Then drive two screws per post, at an angle, through the post bottom and into your foundation.

Note: If you are attaching your posts to a wood deck, you can use 2½" screws (provided) for this step. If you are attaching your posts to concrete, you will need to purchase concrete screws to secure your post bottoms to your foundation.



Step 11. Installing the optional electrical package

Note: If you ordered the optional screen package, install the screens and retainer strips before you install the electrical package.

Note: If you ordered the optional benches, install them before the electrical package.

The electrical package trim strip has approximately 2' of wiring on the bottom end and approximately 9' of wiring on the top end.



1. Choose the post on which to install the electrical package.

2. Measure 7 1/2" up from the bottom of the post (on the inside of the gazebo) and make a mark.

3. Then drill a 7/16" hole, straight out, completely through the center of the post.




Note: If you ordered the optional screen package, make this mark on the screen retainer, and drill the 7/16" hole, straight out, completely through the center of the screen retainer and post.

Note: If you have the optional benches, and you want the electrical package to be on the same post as a bench support, you will need to cut 17" off the bottom of the electrical package trim strip, making sure you do not cut the wiring. Then drill a 7/16" hole, straight out, completely through the center of the post, approximately 2" above the top side of the bench support.



4. Also, drill a 7/16" hole, straight up, and completely through the center of the rafter, where this post and rafter meet, (on the inside of the gazebo).

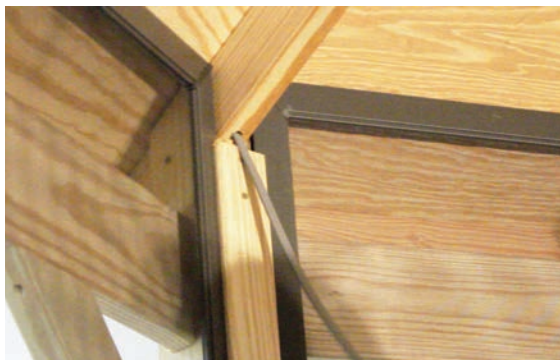

5. Then, run the wires of the electrical package trim strip through these holes, (The long wire at the top goes through the rafter and the short wire goes through the lower hole) and attach the trim strip to the inside of the post (centered) with (10) 2" screws, through the pre-drilled holes.

Note: (If you installed the optional screen package, attach the electrical package trim strip to the screen retainer).



6. Attach the electrical junction box to the outside of the post, (where the short wire comes out) with (2) 1" pan-head screws. After you have finished all your other electrical connections, you can connect your source of electricity, inside this box.



7. Attach the other electrical boxes to the trim strip on the inside, with 1" pan-head screws. Install the switch above the duplex receptacle. (Make sure you do not hit the wiring when you are fastening the electrical boxes).



8. After you have run the wire up through the center of the rafter, lay the wire on top of the rafter, on the plywood roof panel joint, following the top of the rafter, all the way to the peak of the roof.



9. Measure down from the peak of the plywood roof, approximately 2 1/2", and drill a 7/16" hole in the plywood roof panel, where the rafters meet the ceiling center block. The hole should be right beside the ceiling center block and between two rafters. Run the wire down through this hole, into the gazebo. (The ridge caps will cover the wiring on the plywood.)

Note: Make sure you do not puncture the wire when you attach the ridge caps.

Note: When securing the cupola, make sure the screws do not puncture this wire.

10. Now you can attach the fan or light to the ceiling center block, and finish the electrical connections.



12

Step 12. Architectural shingle installation

Nail the shingles to the plywood roof panels using the roofing nails that we have provided, or if you use your own power nailer just make sure the nails do not protrude through the underside of the plywood.

Identifying your shingles



Starter Shingle



Architectural Shingle



Ridge Cap Shingle

1. Using your starter shingles

Break the starter shingles in half (horizontally) along the perforated line thru the middle, to make 2 long strips.

2. Installing your starter shingles

With the tar strip facing up, and toward the edge of your roof, **you must extend your shingles out $\frac{3}{4}$ " past the roof edge.**



3. Attaching the starter shingles

With four or five $\frac{3}{4}$ " nails placed along a line parallel to and 2" above the roof edge. Starter shingles should then be installed around the entire perimeter of your gazebo roof.



Shingle application

4. Place the shingles flush at the bottom with the starter shingle.



5. Attach with five 3/4" nails at the center line marked on the shingle. Do not fasten below the white line or your nail will be exposed.

Note: You can also read the instructions on the shingle package.




6. Cut excess shingle off at the corner.



7. Line up the bottom of the next shingle with the architectural line on the shingle below.

Note: Keep the end of each shingle at least 4" from the end of the shingle below it.

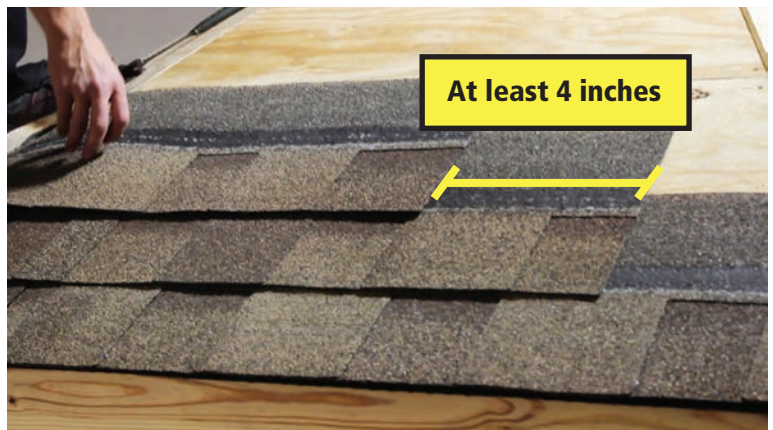

8. Follow the same procedure to the remaining 7 sides to complete your roof shingling.

Step 13. Apply the ridge cap shingles

'Make' your ridge cap shingles by cutting a 3-tab shingle into three individual pieces.

1. Turn the shingle over to expose the reverse side. Then use a utility knife to cut each ridge cap piece. Begin your cut at the manufactured cutout and cut at a slight angle toward the top of the shingle.



2. Place the first ridge cap shingle at the bottom edge of your roof ridge so that the black tar area of the shingle is very near the roof edge. Ridge caps need to be centered over the roof seam.



3. Secure this shingle with one roofing nail on each side approximately 2" up from the roof edge.



4. With a sharp knife or shingle shears, cut the bottom of this first shingle along a line parallel to the roof edge.





5. Now place the second shingle directly on top of the first shingle that you installed and secure this shingle with one roofing nail on each side.

Note: These nails should be placed directly over the black tar portion of the shingle.




6. Apply the remaining ridge cap shingles with a 5 5/8" exposure and secure each shingle with two roofing nails.

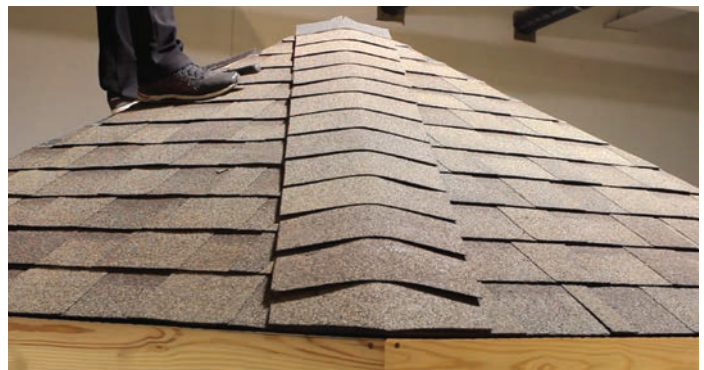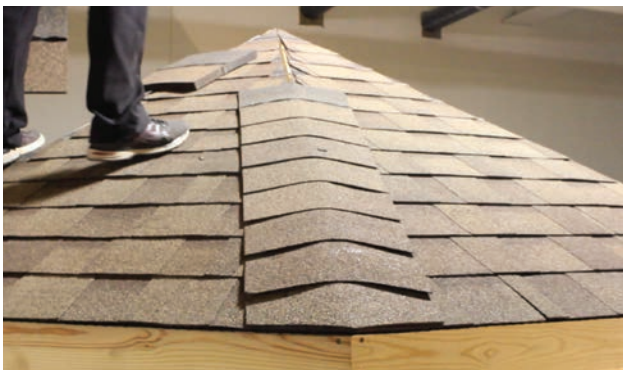

14

Step 14. Shingle and install the cupola

Use ridge cap shingles to roof your cupola.

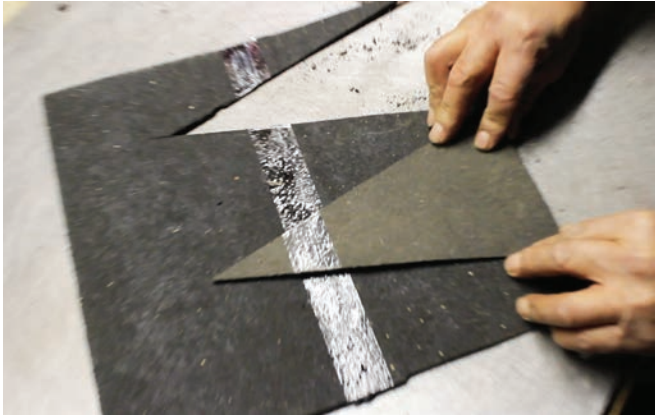

1. Cut triangular pieces out of ridge cap shingles to create your 8 large and 8 small shingles.





2. Nail the 8 large shingle pieces to the cupola first. Then apply the 8 small pieces as shown below. Keep the nails close to the edge of the shingle so they get covered by the ridge cap piece.



3. To create ridge cap shingles for your cupola, cut three 1½" wide strips out of one ridge cap shingle.



4. Use roofing nails to apply one of these strips over each ridge seam of your cupola roof.

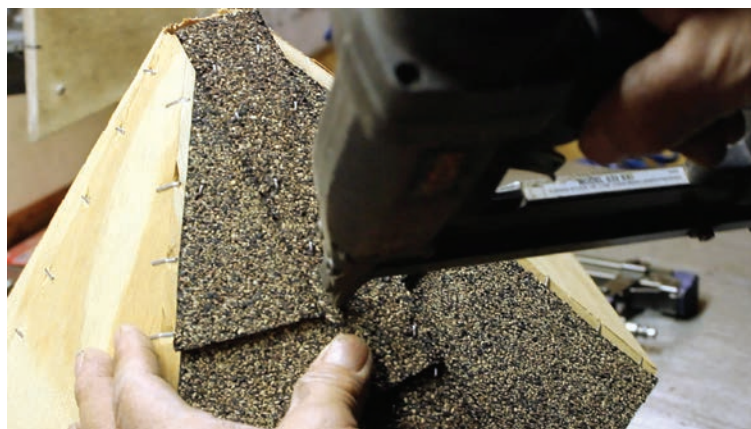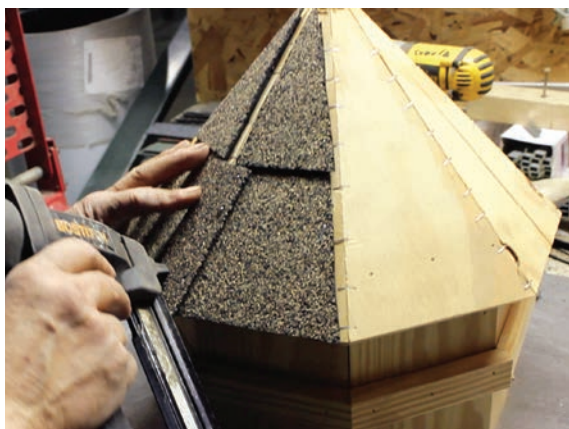

Note: If you have a staple gun, you can use it for the cupola shingles. We suggest a 1/4" wide and 3/4" long stainless steel staple.

5. After you apply shingles to the cupola, you can secure it to your gazebo roof using four 2½" screws. Finally, insert the designer finial into the top of the cupola. This finial does not need to be fastened with nails or screws if the base of the finial is securely inserted into place.



Step 15. Installing the screen package (optional)

Note: See bottom of page



1. Install the 7 large screen panels. You will need to tilt the screen slightly and slide the top in first, between the rafters and against the post. Then slide the bottom in against the post and center it in the opening.
2. Attach the 8 retainer strips on the inside center of each post. On each side of the door, use the single dado retainer. Use the double dado retainers on the other posts. Fasten with 5 – 2" screws through the pre-drilled holes.
3. Install the door frame. Attach the upright angled pieces first, centered on the posts. Then the full 1 3/8" x 2 1/2" uprights directly on the angled strips. Fasten these with the 2 1/2" screws through the pre-drilled holes. Likewise attach the horizontal 1 3/8" x 2 1/2" board to the bottom of header board, making sure they line up with each other on the outside.
4. Attach the 3/4" x 6 1/2" board above the door on the outside. Simply push it up against the plywood and fasten with 3 – 2" screws through the pre-drilled holes.
5. Install the door. Directions for door assembly are included in the door hardware kit.

Note: Do not install the braces in the doorway. If you have already installed your gazebo with these braces, you can still remove them by backing out all the screws except the 2 at the top of the post and swinging this section out.


Step 16. Installing the benches (optional)



1. Center the back of each bench support against your gazebo post and rest the bottom of the support firmly into your gazebo floor.

Then, with two 2½" **screws**, attach the vertical back portion of the support to the gazebo post (1 screw on upper left and 1 screw on lower right).

Note: If you have the optional screen package, simply attach it to the screen retainers.

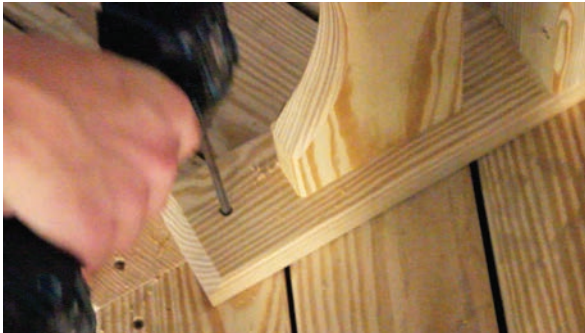

2. Place a long seat board and a short seat board onto two bench support boards.

The front of the front seat will cover and conceal the top of the bench support board and extend in past a little bit. Just move it in towards the center of the gazebo until they reach from center of support to center of support.



3. Take a bench end cap and attach it to the ends of these two seat boards with 2½" **screws**.

Wood bench end cap is 12".

4. Now take the remainder of your seat boards and center them in position over the bench support boards.

Note: Keep corners of the bench seat boards approx. 2" from posts.



5. Confirm that the seat boards remain in their proper position, then attach each seat board to the bench support board by driving screws up through the bench support board and into the bottom of each seat. Use 2½" screws.





www.AmishGazebos.com
1-800-700-1777