

4' X 28' RECTANGLE 6" RADIUS

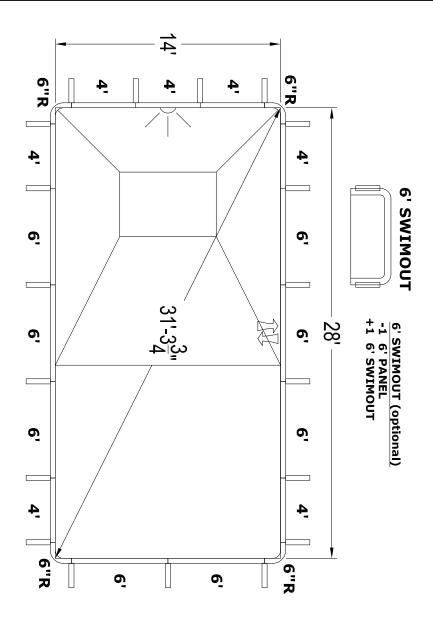

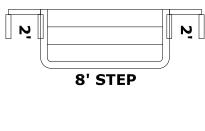

-2 6' PANEL 8' STEP (optional)

COPING LAYOUT

*NOTE: REFER TO INSTALLATION MANUAL FOR MORE INFO.

3/8" REBAR WHERE NEEDED AROUND PERIMETER OF BOND BEAM

ATTENTION DEALER/BUILDER: NO DIVING WARNING

+1 BRACE +2 2' PANEL

+1 8' STEP

Ō

COZY COVE

-1 6' PANEL

+2 3' PANELS -2 4' PANELS

+1 8' COZY COVE


8' COZYCOVE (optional)


ف

QTY PART BILL OF MATERIALS HP199 BRACE HP204L | 4' PANEL (LIGHT HP204 4' PANEL HP206 6' PANEL HP256 | 6"R PANEL 3'4" 28 28 4 ගු DESCRIPTION 木 ഗ 3 U Z 겅 ∞_ 4-PERIMETER -G---I--OVERDIG DETAIL 83'2" CONCRETE BOND BEAM APPROX 4" DEEP POLYMER BRACE EARTH -J--K--SQ. FOOTAGE |--- 2' OVERDIG ---GALLONS BENCHMARK POLYMER COPING 2' VERMICULITE OR SAND BOTTOM 11054 392

G

W

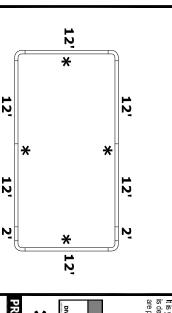

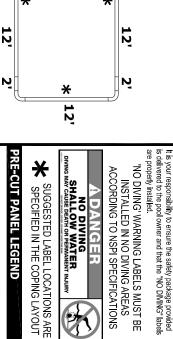



HSH

AQUAGENIE 13



JAN 2012 | CORNERSTONE

14' X 28' RECTANGLE 6" RADIUS

Copyright © 2012 by Hydra Pools 20110-PWH

uocument ID: HF5100, Hydra Standard Panel Layout Drawing Rev Date: 12/6/2005 Rev Level: A

3. The ideal water level should be to the middle of the skimmer opening(s).

2. Soil to have minimum bearing capacity of 2000 P.S.F.
3. Locate top of pool at least 6" above surrounding land elevation.
4. See 'Over Dig Detail' for excavation around pool.
5. Fill words under base of panels and tamp well.
6. Backfill with non-expansive material.

EXCAVATION NOTES

Rough excavation should be 2" deeper in each instance.

The dealer or contractor who sells or installs your pool is an independant contractor and is not an

THIS DOCUMENT IS FOR ILLUSTRATIVE PURPOSES ONLY.

ADDITIONAL NOTES

construction. Proper installation is the responsibility of the dealer/builder/contractor. only to normal ground conditions. There may be additional precautions and/or methods of agent of the Manufacturer. The construction methods Illustrated here are suggestions and apply

Dimensions are from inside pool panels.

nese are finished dimensions ready for the liner.

GENERAL NOTES