



NE1217 52" Ladder with Safety Barrier and Removable Outside Steps Installation Instructions

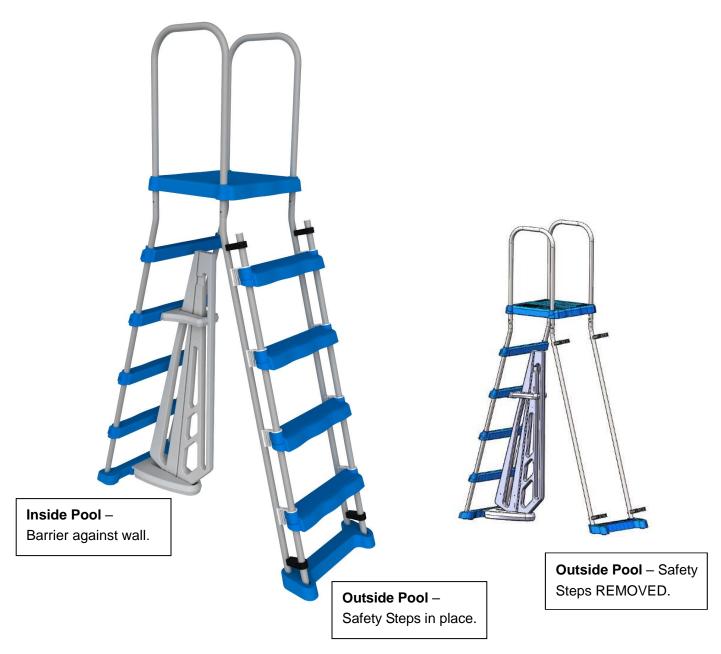

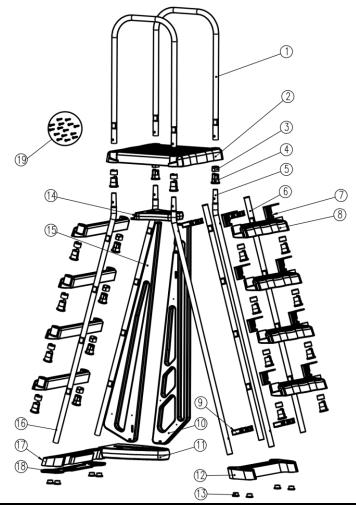

| | | | () |
|--|----------|------|---------------------------------------|
| Blue Wave NE1217 Pool Ladder with Barrier Parts List | | | |
| Item No. | Part No. | Qty. | Description |
| 1 | NEP2601 | 2 | Platform Handrail |
| 2 | NEP2602 | 1 | Platform |
| 3 | NEP2603 | 20 | Support Compression Collar |
| 4 | NEP2604 | 20 | Support Compression Clip |
| 5 | NEP2605 | 2 | Outside Support Rail |
| 6 | NEP2606 | 2 | Outside Removable Step Rail |
| 7 | NEP2607 | 8 | Bushing, Outside Removable Step Rail |
| 8 | NEP2608 | 8 | Step Tread |
| 9 | NEP2609 | 4 | Safety Clip |
| 10 | NEP2610 | 1 | Safety Barrier Outer Half |
| 11 | NEP2611 | 1 | Safety Barrier Base |
| 12 | NEP2612 | 1 | Bottom Step, Outer |
| 13 | NEP2613 | 8 | Anti-Skid Plugs |
| 14 | NEP2614 | 1 | Safety Barrier Upper Support |
| 15 | NEP2615 | 1 | Safety Barrier Inner Half |
| 16 | NEP2616 | 2 | Inside Support Rail |
| 17 | NEP2617 | 1 | Bottom Step, Inner |
| 18 | NEP2618 | 2 | Inside Step Base Pad |
| 19 | NEP2619 | 1 | Hardware Pack (Screws, Washers, Nuts) |

Page 2 of 8 – Blue Wave Products – NE1217 20160525B

Important:

- Read these Assembly and Use instructions carefully.
- Do not use the ladder for any other purpose it is only for use with an above ground pool.
- Maximum authorized weight: 330lbs (150 kg.)
- To help prevent unauthorized entry to the pool, remove the Safety Steps when not in use (see cover illustrations).
- Check the condition of the ladder components before assembly, before and during each use.
- In winter, we recommend removing, cleaning, and drying the ladder to keep it in working condition.
- Failure to comply with maintenance rules may pose a serious risk to health.
- Do not swim around or behind the ladder.
- Only one person at a time should climb up the ladder.
- Do not dive or jump from the ladder.
- Do not sit on the ladder.
- Do not bounce or jump on the ladder.
- Do not allow children to use the ladder unless under close competent supervision.
- Place the ladder on solid, level ground.
- Position the provided safety sticker on a step of the ladder so that it is clearly visible.
- Keep these instructions for information and future reference.


This ladder is easy to install and can be assembled by one adult in about 1 HOUR.

The following tools are needed:

- Medium Flat head screwdriver
- 10mm Wrench or Socket

ASSEMBLY DETAILS

Refer back to these during assembly, as instructed.

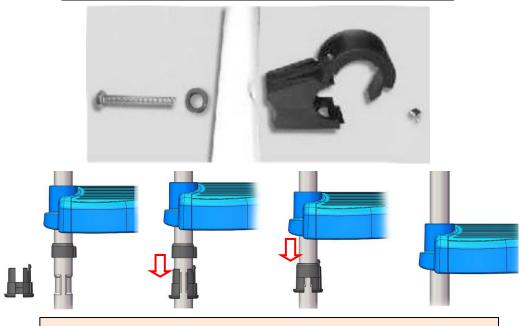


ASSEMBLY DETAIL A - Detail Diagrams of Step/Platform installation



<u>ASSEMBLY DETAIL B</u> – Detail Diagrams of Bushing installation



<u>ASSEMBLY DETAIL C</u> – Detail Diagram of Bridge Handrail assembly.

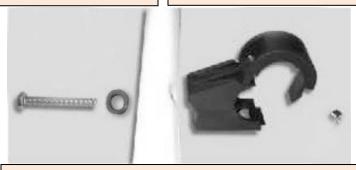


<u>ASSEMBLY DETAIL D</u> – Assembly of Safety Clips to the Handrail

Step 1: Install the Inside Steps



Follow <u>ASSEMBLY DETAIL A</u> to install the first step through the fourth step of inner ladder. Note: The end with the White Plug should face UPWARD.

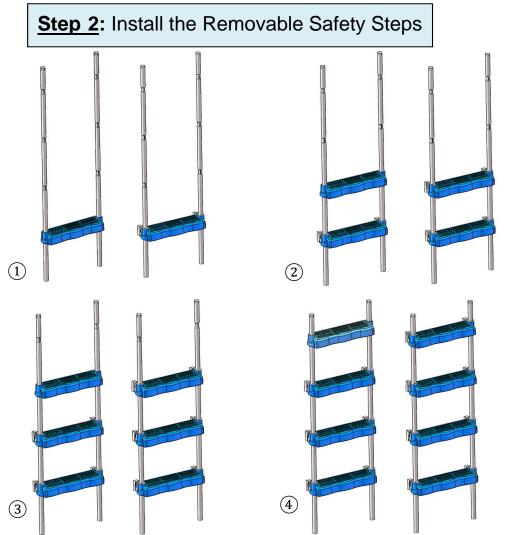



Follow <u>ASSEMBLY DETAIL A</u> to install the Steps and then Follow <u>ASSEMBLY DETAIL B</u> to install two bushings on as shown in sub-steps ① through ④, above. For easier installation, remove the White Plugs first and when the bushings are installed, re-install the white plug.

Note: The end with White Plug should face UPWARD.




Follow ASSEMBLY DETAIL A to install the platform to the connection bridge.




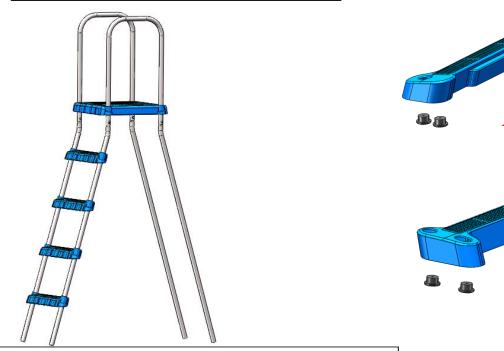

① Lay the platform, inner ladder, and outside handrail on the ground. Follow the above illustration to connect handrails. Refer to **ASSEMBLY DETAIL C** for screw and washer order. After this step, the ladder should be in an "A" shape, as shown.

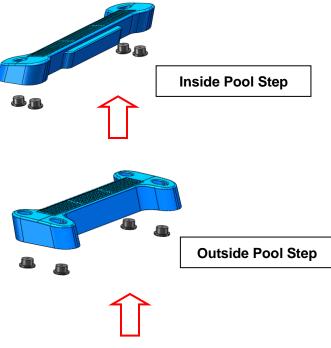

② Insert 4 anti-slip plugs under inside and outside base steps as shown above.

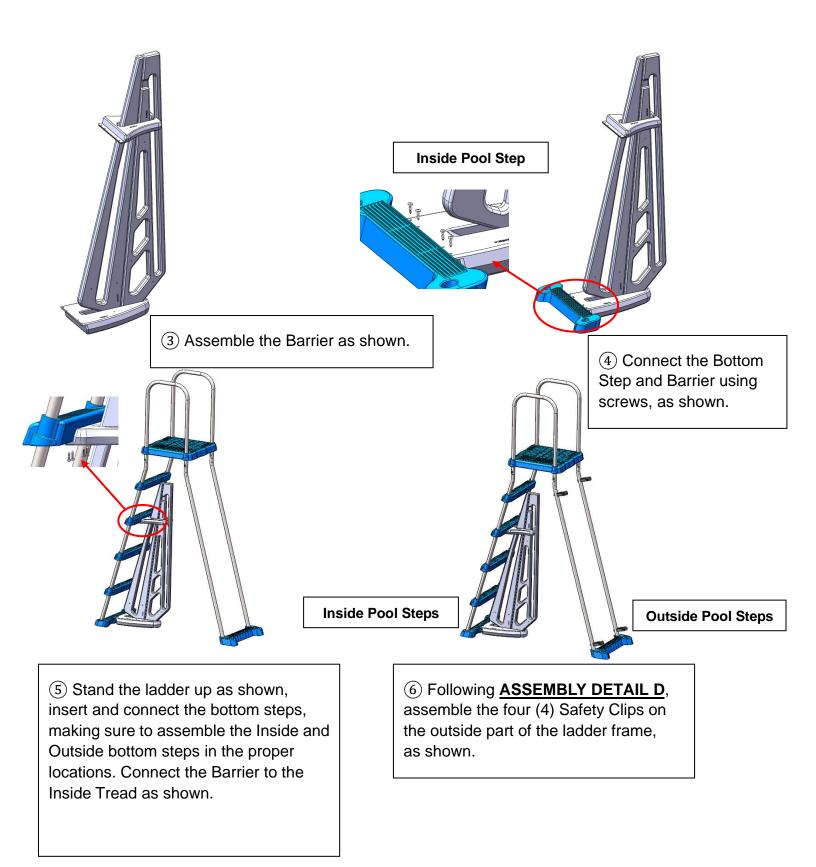

Step 5: Install Removable Safety Steps



① Insert the removable Safety Steps into the holes in the Bottom Outside Step. Tilt the Removable Safety Steps up, aligned with the Outside Rails.



2 Clip the Removable Safety Steps into the Safety Clips as shown to finish the installation.



Blue Wave Products, Inc.

1745 Wallace Ave St. Charles, IL 60174

TOLL-FREE CUSTOMER SUPPORT: (800) 759-0977

E- MAIL: INFO@BLUEWAVEPRODUCTS.COM

MADE IN CHINA
Copyright © 2016, Blue Wave Products, Inc.
Saint Charles, IL 60174
All Rights Reserved